


PIPER

31P-425 NAVAJO

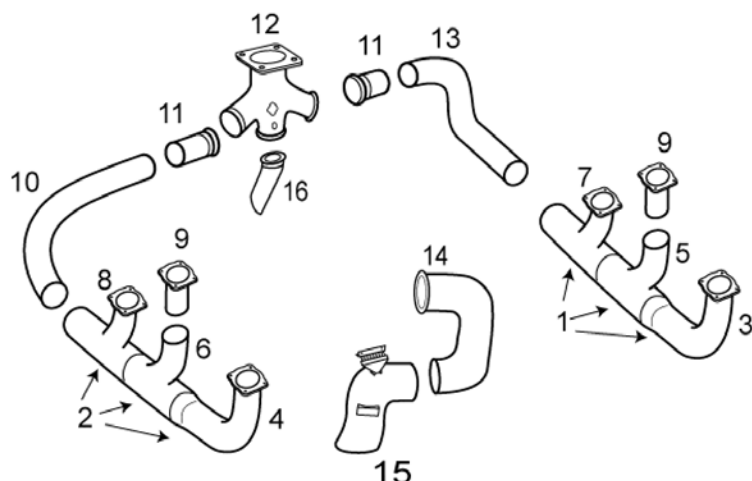

Check all slip joints for freedom of movement

Inspect transition for cracks

Check stack for cracking or heat distortion

ITEM	OEM PART NO	DESCRIPTION	Condition
01	LW13055	LH STACK ASSY	OH
02	LW13054	RH STACK ASSY	OH
03	78004	CYL #1 LF	OH
04	77427	CYL # 2 RF	OH
05	78005	CYL #3 LC	OH
06	78287	CYL #4 RC	OH
07	78286	CYL #5 LR	OH
08	78011	CLY #6 RR	OH
09	77930	FLANGE	OH
10	78012	RR ELBOW	OH
11	LW13027	RR & LR ADAPTER	OH
12	LW11016	TRANSITION	OH
13	78008	LR ELBOW	OH
14	46323-05	UPPER TAIL PIPE	OH
15	48788-05	LOWER TAILPIPE	OH
16	46324	WASTEGATE OVERBOARD	OH