


BEECHCRAFT**KING AIR**

King Air stack repairs are limited to cracks that are 3" or less per Beech Service Manual.

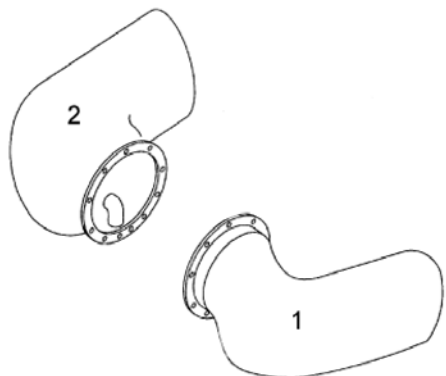

ITEM	OEM PART NO	DESCRIPTION	Condition
01	101-950017-1	LH STACK B300	OH
01	101-950017-33	LH STACK B300	OH
01	101-950017-73	LH STACK B300	OH
01	101-950017-77	LH STACK B300	OH
01	130-950001-1	LH STACK B300	OH
02	101-950017-3	RH STACK B300	OH
02	101-950017-35	RH STACK B300	OH
02	101-950017-75	RH STACK B300	OH
02	101-950017-79	RH STACK B300	OH
02	130-950001-3	RH STACK B300	OH
NS	101-950019-1	LH STACK B200	OH
NS	101-950019-3	RH STACK B200	OH
NS	101-950022-1	LH STACK B200	OH
NS	101-950022-3	RH STACK B200	OH