


**CESSNA**


**310 R**

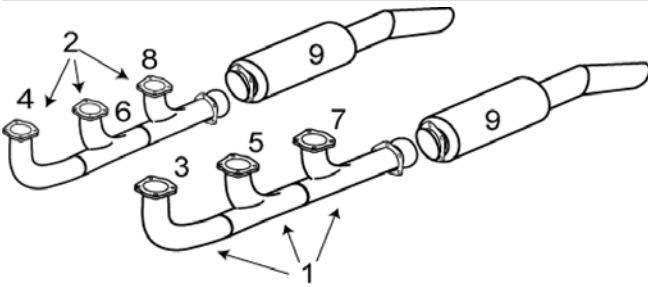

Slip joint assemblies should easily slide in and out of each other.  
 Check slip joints for wear.  
 Check mufflers for baffles cones.

ITEM	OEM PART NO	DESCRIPTION	Condition
01	9910295-13	LH STACK ASSY	OH
02	9910295-14	RH STACK ASSY	OH
03	9910295-17	LH FWD RISER	OH
04	9910295-18	RH FWD RISER	OH
05	9910295-19	LH CTR RISER	OH
06	9910295-20	RH CTR RISER	OH
07	9910295-21	LH AFT RISER	OH
08	9910295-22	RH AFT RISER	OH
09	0852597-1	LH & RH MUFFLERS	OH
NS	0852597SK	SPRING KIT	NEW
NS	628260	GASKET	NEW

**335**

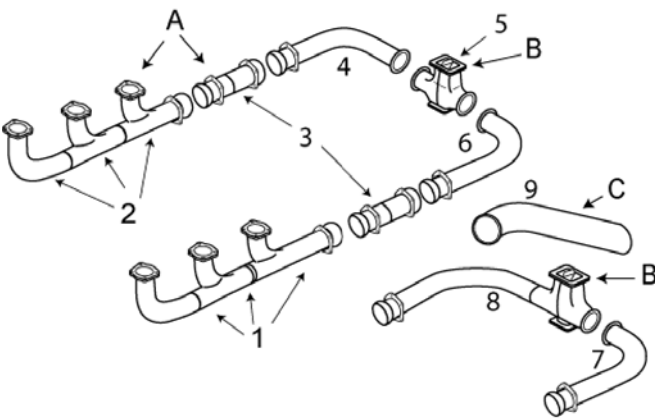

**Subject to AD 2000-01-16**

**AWI is authorized by the FAA to meet the overhaul requirements (paragraph "G") on AD 2000-01-16.**

Visual inspection every 50 hrs. or 30 days  
 Remove tailpipes inspect for cracks every 12 mo.  
 Inspect & pressure test exhaust system every 12 mo.  
 Replace multi-segment V-band clamps every 500 hrs.  
 Remove the exhaust system from the slip joints aft to all turbo charger components every 2,500 hrs. or 12 yrs. which ever occurs first.

Pay special attention to:

- A Inspect all slip joints for movement
- B Check flow divider plate for cracks or distortion
- C Check tailpipe for internal pitting and wall thickness

ITEM	OEM PART NO	DESCRIPTION	Condition
01	9910295-13	LH STACK ASSY	OH
02	9910295-14	RH STACK ASSY	OH
03	A9910296-7	SLIP JOINT	NEW
04	9910301-14	LH OB STACK ELBOW (inconel)	OH
05	9910301-15	LH HEADER	OH
06	9910301-16	LH IB STACK ELBOW (inconel)	OH
07	9910301-17	RH IB STACK ELBOW (inconel)	OH
08	9910301-18	RH HEADER	OH
09	K0850711-43	LH TAILPIPE	NEW
09	K0850711-44	RH TAILPIPE	NEW