


**CESSNA  
402C BUSLINER**

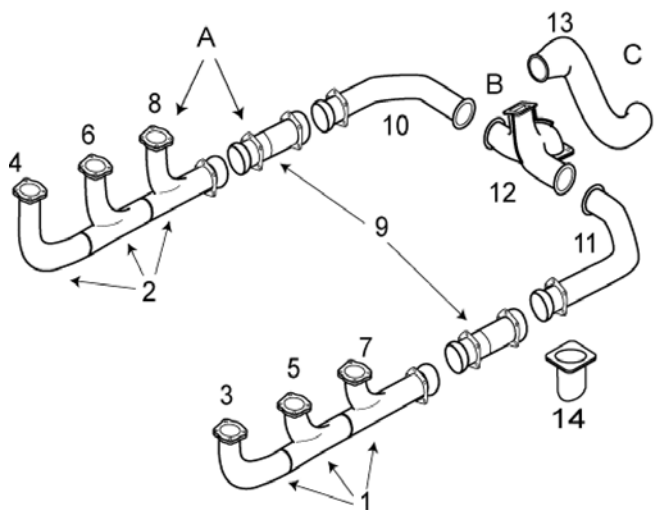

**Subject to AD 2000-01-16**

**AWI is authorized by the FAA to meet the overhaul requirements (paragraph "G") on AD 2000-01-16.**

- Visual inspection every 50 hrs. or 30 days
- Remove tailpipes inspect for cracks every 12 mo.
- Inspect & pressure test exhaust system every 12 mo.
- Replace multi-segment V-band clamps every 500 hrs.
- Remove the exhaust system from the slip joints aft to all turbo charger components every 2,500 hrs. or 12 yrs. which ever occurs first.

Pay special attention to:

- A Inspect all slip joints for movement
- B Check flow divider plate for cracks or distortion
- C Check tailpipe for internal pitting and wall thickness

(INC)= Inconel  
(S/S)= Stainless Steel

ITEM	OEM PART NO	DESCRIPTION	Condition
01	9910295-13	LH STACK ASSY (S/S)	OH
01	9910295-9	LH STACK ASSY (INC)	OH
02	9910295-10	RH STACK ASSY (INC)	OH
02	9910295-14	RH STACK ASSY (S/S)	OH
03	9910295-1	LH FWD RISER (INC)	OH
03	9910295-17	LH FWD RISER (S/S)	OH
04	9910295-2	RH RWD RISER (INC)	OH
04	9920195-18	RH FWD RISER (S/S)	OH
05	9910295-19	LH CTR RISER (S/S)	OH
05	9910295-3	LH CTR RISER (INC)	OH
06	9910295-20	RH CTR RISER (S/S)	OH
06	9910295-4	RH CTR RISER (INC)	OH
07	9910295-21	LH AFT RISER (S/S)	OH
07	9910295-5	LH AFT RISER (INC)	OH
08	9910295-22	RH AFT RISER (S/S)	OH
08	9910295-6	RH AFT RISER (INC)	OH
09	A9910296-7	SLIP JOINT (S/S)	NEW
10	9910377-2	RH ELBOW (INC)	OH
10	9910377-2	RH ELBOW (S/S)	OH
11	9910377-1	LH ELBOW (INC)	OH
11	9910377-1	LH ELBOW (S/S)	OH
12	9910433-10	HEADER ASSY	OH
12	9910433-6	HEADER ASSY	OH
13	9910433-2	RH TAIL PIPE	OH
13	9910433-3	LH TAIL PIPE	OH
14	9910433-7	BYPASS OVERBOARD	OH
NS	1001-6	SPRING KIT	NEW